

Telos Zephyr/IP Release Notes

Many users inquire what features are new in the latest firmware release. The following Release Notes show software upgrade instructions, along with the improvements and features added with each significant release.

Upgrade Instructions:

1. Download the latest software version for the Zephyr/IP from the Telos Systems web page (www.telos-systems.com). Save it to a convenient place on your PC.
2. Connect to the embedded web page of the Z/IP, you will be upgrading by typing its IP Address into the Navigation Bar of your browser.
3. Navigate to the "Update" page of the Z/IP.
4. Locate the "Update System-Software and Reboot" section of the page and click the "Browse" button to locate the software package you just downloaded. Navigate through your computer's directories and double click the "xxxxx.gz" file which you downloaded.
5. Now click on the "Update System and Reboot" button. The front panel of the Z/IP will indicate the progress of the update procedure. Follow the prompts displayed on the screen. After the unit reboots, it will retain your previous settings, but will be running the new software.

Release Notes:

Version 1.5.1r

Released October 21, 2008

- Addition: Software for Mixer and Studio Version
- Addition: SIP connection from Z/IP to ZXS and vice versa
- Addition: SIP connection between Z/IPs
- Addition: Web interface (java) for doing calls, communication with the server
- Addition: Web interface for Mixer version
- Improvement: Front panel messages
- Improvement: Setup of wireless devices

Version 1.4.5r

Released May 30, 2008

- Reset to defaults fix

Version 1.4.2r

Released May 15, 2008

- Name resolution fix
- Additions: Redial if connection is lost
- Additions: New UMTS USB driver (Novatel 720)

(More)

Version 1.3.1r

Released March 21, 2008

- Replaces old ELD codec with new MPEG-standardized ELD codec
- Additions: IP-to-IP connections
- Additions: Call set-up using SIP

Version 1.0.2r

Released December 2007

First Version